

BW6110-000 Code List

Ver.: 0.51
 Prepared by: Frankie, Kei, Theo
 Date: 2005/8/26

Source of Code Library:

1. BW6090 (BW0680 was outdate).
2. Additional codes as in PB.
3. JR020-03.
4. BW0368R2 DVD codes
(0045/0125/0155/0165/0195/0205/0215/0225/0235/0245/0255/0275/0285/0295).
5. BW0368R2 TV/VCR/SAT codes (JR183-03).
6. "Bang & Olufsen" and "Loewe" codes from One-for-All URC(020926-03).
7. "Bang & Olufsen" codes from Bang & Olufsen remote (970123-08).
8. - "Centenna" codes from 031103-01, 031103-02, 031103-03
 - "Daitsu" codes from 040528-01, 040528-02, 040528-03
 - "Bang & Olufsen" codes from Bang & Olufsen remote (040227-02).
9. "Foxtel" from Foxtel (040510-02) (code list ver 0.41)
10. JR018-05 (code list ver 0.5)

Revision History

Version	Description
0.0	First Released.
0.1	Revised codes for DVD("Hitachi", "JVC", "Loewe", "Zenith"); Revised codes for SAT("Ansonic", "D-Box", "Granada", "Philips");
0.2	Added cross reference for new added codes.
0.3	Added codes for TV, VCR and SAT (JR183-03). Refer S/W Ver.J
0.31	Added codes for TV & VCR("Bang & Olufsen"). Refer S/W ver. J Corrected brand name "Surpa" to "Supra"
0.32	Correct codelist errors. Refer S/W ver.L Duplicate error: TV - Multitech, code 1021 Typing error: TV - RCA, code change from 0511 to 0051. Spelling error: SAT, change from Tanderg to Tandberg. Missing error: VCR - Marantz, code 0402. Missing error: SAT - Goodmans, code 0403.
0.33	Added Bang & Olufsen codes as TV-1051 and VCR-0852. Refer S/W ver. M
0.4	Added new codes (MCN021-04), refer to S/W ver. S - Added codes for TV - Cenenna, code 1061,1071,1081. - Added codes for TV - Daitsu, 1091, 1101, 1111. - Added codes for TV - Bang & Olufsen, code 1121. - Added codes for SAT - Bang & Olufsen, code 1283. - Added codes for CD - Bang & Olufsen, code 1426. - Added codes for DVD - Cenenna, code 0408. - Added codes for DVD - Bang & Olufsen, code 0418.
0.41	- Added code Foxtel code - 1293. Refer to S/W ver. T
0.5	Detete all old codes of TV and SAT/DSS/CBL. Added TV codes from 0001 to 2811 (from BW0378R2). Added SAT/DSS/CBL codes from 0003 to 1963 (from BW0378R2). Added SAT/DSS/CBL codes 1953 and 1963 from original remote. Added DVD codes from 0428 to 0998(from BW0378). Refer to S/W ver. U

0.51	<p>Added and revise new codes (JR231-05), refer to S/W ver. U2</p> <ul style="list-style-type: none">- Added codes for TV - Bang & Olufsen, code 2821.- Added codes for VCR - Bang & Olufsen, code 0862.- Added codes for SAT - Bang & Olufsen, code 1973.- Added codes for RADIO - Bang & Olufsen, code 0095.- Added codes for CD - Bang & Olufsen, code 1426.- Added codes for ATAPE - Bang & Olufsen, code 1436.- Added codes for DVD - Bang & Olufsen, code 0418.
------	---

VCR													
VCR	Aiwa	0612											
VCR	Akai	0262	0612	0762	0782								
VCR	Alba	0662	0692										
VCR	ASA	0622											
VCR	Audio Dynamics	0202											
VCR	Baird	0612	0692										
VCR	Bang & olufsen	0612	0842	0852	0862								
VCR	Baur	0622	0632	0782									
VCR	Blaupunkt	0412	0632	0652	0682	0702	0752	0802					
VCR	Bush	0692	0782										
VCR	Candle	0342											
VCR	Capehart	0662											
VCR	CGE	0612	0762										
VCR	Citizen	0342											
VCR	Craig	0642											
VCR	Crown	0662	0692										
VCR	Curtis Mathes	0342											
VCR	Daewoo	0662	0692										
VCR	Daytron	0662											
VCR	DBX	0202											
VCR	Decca	0612	0622										
VCR	Degraaf	0622	0722										
VCR	Dual	0612	0742										
VCR	Dumont	0622	0722										
VCR	Dynatech	0342	0472										
VCR	Elin	0642											
VCR	Emerson	0072	0122	0132	0142	0152	0162	0172	0182	0192	0212	0342	0712
VCR	Ferguson	0612											
VCR	Finlandia	0622	0722										
VCR	Finlux	0612	0622	0702	0722	0732							
VCR	Fisher	0722	0732										
VCR	Formenti-Phoenix	0622											
VCR	Frontech	0662											
VCR	GEC	0622											
VCR	Goldstar	0082	0782										
VCR	Goodmans	0402	0642	0692									
VCR	Graetz	0612											
VCR	Granada	0622	0652	0702	0722	0732	0782						
VCR	Grundig	0622	0632	0652	0682	0812	0822	0832					
VCR	Hanseatic	0622	0782										
VCR	Hinari	0712											
VCR	Hitachi	0102	0562	0572	0582	0592	0602	0612	0782				
VCR	Imperial	0642											
VCR	Inno Hit	0622	0642										
VCR	Interfunk	0622											
VCR	ITT	0612	0642	0722	0732	0762							
VCR	ITT Nokia	0612	0642	0722	0732	0762							
VCR	Jensen	0612											
VCR	JVC	0002	0202	0472	0522	0532	0542	0552	0612	0762	0772		
VCR	Karcher	0622	0642	0782									
VCR	Kenwood	0202	0542	0612	0732								
VCR	Loewe Opta	0622	0652	0672									
VCR	Logik	0642											
VCR	Luxor	0732	0782										
VCR	LXI	0022	0342										
VCR	Magnadyne	0622											
VCR	Magnasonic	0732											
VCR	Magnavox	0342	0482	0492	0502	0512							
VCR	Marantz	0202	0402	0622	0652								
VCR	Matsui	0612	0622	0632	0712	0782							
VCR	Matsushita	0342											
VCR	MEI	0222											
VCR	Memorex	0232	0242	0472	0512	0722	0732						
VCR	Metz	0632	0652										
VCR	Minerva	0632	0652	0682									
VCR	Minolta	0592	0602										
VCR	Mitsubishi	0452	0462	0542	0622	0632							
VCR	Montgomery	0472											
VCR	Motorola	0472											
VCR	MTC	0642											
VCR	Multitech	0622	0632	0692									
VCR	N.E.I.	0622											
VCR	NAD	0442											
VCR	National	0702											
VCR	NEC	0202	0292	0422	0432	0542	0612						

VCR	Neckermann	0612	0622	0642	0652	0712	0732	0762	0782				
VCR	Nikkai	0642	0662										
VCR	Nobliko	0652											
VCR	Nokia	0612	0642	0722	0732	0762							
VCR	Nordmende	0612	0742	0762	0772								
VCR	Olympus	0412	0702										
VCR	Optimus	0442	0472										
VCR	Optonica	0402	0472										
VCR	Orion	0212	0712										
VCR	Otto Versand	0622	0632	0782									
VCR	Panasonic	0012	0052	0092	0222	0342	0372	0382	0392	0412	0702	0752	0802
VCR	Penny	0202	0432	0602									
VCR	Pentax	0592	0602										
VCR	Philips	0282	0342	0402	0492	0622	0652	0672					
VCR	Phonola	0622	0672										
VCR	Pioneer	0442	0542	0622									
VCR	Portland	0662											
VCR	Pulsar	0512											
VCR	Pye	0622	0672										
VCR	Quartz	0272	0732										
VCR	Quasar	0382	0392										
VCR	Quelle	0612	0622	0632	0642	0652	0702	0712					
VCR	RadioShack	0472											
VCR	RCA	0112	0382	0392	0482	0592	0602						
VCR	Realistic	0402	0472	0642	0722	0732							
VCR	Rex	0612	0772										
VCR	Ricoh	0352	0362										
VCR	Saba	0612	0742	0762	0772								
VCR	Saisho	0212	0582	0712									
VCR	Salora	0732	0782										
VCR	Samsung	0212	0312	0622	0642								
VCR	Sanky	0472	0512										
VCR	Sansui	0292	0542	0612									
VCR	Sanyo	0242	0722	0732									
VCR	SBR	0282	0622	0672									
VCR	Schaub Lorenz	0612											
VCR	Schneider	0622	0642										
VCR	Scott	0342											
VCR	Sears	0302	0342	0592	0602								
VCR	SEG	0642											
VCR	Seleco	0612											
VCR	Sentra	0662											
VCR	Sharp	0402	0472										
VCR	Siemens	0632	0652	0682	0732								
VCR	Sinudyne	0622											
VCR	Sonitron	0722	0732										
VCR	Sonoko	0692											
VCR	Sony	0032	0332	0352	0362								
VCR	STS	0602											
VCR	Sunpak	0352											
VCR	Sylvania	0492	0502										
VCR	Tandberg	0632	0712										
VCR	Tatung	0612	0622										
VCR	Teac	0612											
VCR	Technics	0702											
VCR	Teknika	0322											
VCR	Telefunken	0252	0612	0742	0762	0772	0792						
VCR	Thomson	0612	0742	0762									
VCR	Thorn	0612											
VCR	Thorn-Ferguson	0612	0762										
VCR	TMK	0212	0712										
VCR	Toshiba	0062	0302	0342	0612								
VCR	Totevision	0642											
VCR	Uher	0612	0642										
VCR	Unitech	0642											
VCR	Vector Research	0202	0432										
VCR	Victor	0542	0552	0612									
VCR	Video Concepts	0202	0432										
VCR	Wards	0322	0402	0472	0482	0602							
VCR	Yamaha	0202	0612										
VCR	Yoko	0632	0642										
VCR	Zenith	0042	0362	0512									

SAT/DSS/CBL	
SAT Akai	0263
SAT Alba	0263
SAT Amstrad	0283 0573 0583 1573
SAT Astro	0663
SAT Austar	0463 0723 1883
SAT Avandis	1003
SAT Bang & olufsen	1973
SAT British Telecom	0263
SAT Bskyb	1573
SAT Bt	0293 0633
SAT Cabletime	1773 1783 1803
SAT Cambridge	0023 0263
SAT Canal+	0353 1633 1643
SAT Cgv Freeview	1653 1663 1683
SAT Clyde Cablevision	1753
SAT D-Box	0153 0903
SAT Echostar	0093
SAT Elta	0273
SAT Eurodec	0213 0223 0233
SAT Ferguson	0013
SAT Filmnet	1723 1763
SAT Force	1093 1123
SAT Foxtel	0453 0483 0743 0813 1533 1843 1853 1863
SAT France Telecom	1713
SAT G.I.	1883 1903
SAT Gec	1753
SAT Gradiente	1593
SAT Grundig	0673 0683 0693 1573
SAT Hirschmann	0393 0403 0413 0423 0433
SAT Hk Cable	1893 1943
SAT Homecast	1953
SAT Humax	1053
SAT Jerrold	1743
SAT Jvc	0263
SAT Kathrein	0383
SAT Kyostar	0073
SAT Lifesat	0313 0333 0343
SAT Macab	0933
SAT Medion	0313 0333
SAT Metronic	0963 0973 0983 0993 1013 1023 1033
SAT Micromaxx	0313 0333
SAT Movie Time	1793
SAT Multichoice	0733
SAT Nikko	0123 0133
SAT Nokia	0143 0803 0883 0893 0913 0943 1133 1153 1163 1523
SAT Now Broadband Tv	1933
SAT Nsc	1793
SAT Ondigital	0513 0853 0863 1373 1383 1523 1553 1563
SAT Optusvision	1873
SAT Ouralis	1043
SAT Pace	0513 0563 0613 0623 0783 0793 0803 0873 1373 1573 1593
SAT Panasonic	0453 1573
SAT Pansat	0063
SAT Philips	0113 0173 0183 0193 0523 0753 0763 0773 0803 0843 0853 0863 1553 1563 1713
SAT Prosat	0163
SAT Sagem	0243 0923 1113 1393 1603
SAT Samsung	0553 1103 1823
SAT Satellite	0533
SAT Scientific Atlanta	1813 1833
SAT Sector	0253
SAT Sedea	0083
SAT Sky (Sky Digital)	0443 1573 1583 1593
SAT Sky italy	1673
SAT Sky master	1343 1353 1433 1443 1473 1483 1913 1923
SAT Sky satellite	1363 1423 1503 1513
SAT Sky+ (Sky Digital +)	1543
SAT Sony	1573
SAT Starcom	1743
SAT Strong	0073 1173 1183 1193 1203 1213 1223 1233 1243 1253 1263 1273 1283 1293 1303 1313 1323 1333
SAT Sts	1793
SAT Sun/Moon/Star	0463
SAT Tandberg	0103
SAT Tele	1763
SAT Tele+	0833
SAT Tele+1	1763
SAT Teleservice	1734 1803
SAT Televes	0003 0033 0043 0053 0303 0473 0493 0503 0543 0643 0653 0703 0713 0823 1063 1073 1403 1413 1453 1463 1493
SAT Thomson	1143 1603
SAT Thorn-Ferguson	0013
SAT Toshiba	1383
SAT Tps	0363 1413 1603 1613 1623
SAT Triad	1143
SAT Tudi	1703
SAT United cable	1743
SAT Vortec	0063
SAT Wallis Universal	1963
SAT Worldsat	0593 0603
SAT Xsat	0373 0953
SAT Zehnder	0203 0323
SAT Zenith	1583 1733
SAT Zinwel	1083

CD

CD	Acoustic Research	1346																		
CD	ADC	0076	0116																	
CD	Adcom	0256	0306	1066																
CD	ADS	0316																		
CD	Aiwa	0346	0996	1086	1106															
CD	Akai	0226	0536	0586																
CD	Alpine	1266	1356																	
CD	Audio-Technica	0596																		
CD	Bang & Olufsen	1426	1436																	
CD	BSR	0296	0706	0826																
CD	California Audio Lab	0106																		
CD	Cambridge Audio	1416																		
CD	Capetronic	1256																		
CD	Carrera	0296																		
CD	Carver	0336	1186																	
CD	Casio	0396																		
CD	Crown	0236																		
CD	Curtis Mathes	0396																		
CD	Denon	0326	0926	0936																
CD	Dual	0556																		
CD	Dynamic Bass (h)	0606																		
CD	Emerson	0256	0376	1156																
CD	Eroica	1326																		
CD	Fisher	0146	0606	0976	1056															
CD	Garrard	0416																		
CD	Genexxa	0356	0376	1156																
CD	Goldstar	1186	1276	1316	1386															
CD	H/K	0156	0226	0516	1046															
CD	Hitachi	0246	0256	0556	0866															
CD	Inkel	0166	0446																	
CD	JVC	0366																		
CD	Kenwood	0096	0146	0456	0636	0776	0786	0796	0806	0946										
CD	Kyocera	0076																		
CD	Luxman	0126	0476	0726	0756	0766	1036													
CD	Magnavox	0216	0266	0696	1006															
CD	Marantz	0266	0286	0426	0836	1396														
CD	Mcintosh	0406	1136																	
CD	MCS	0956	1366																	
CD	Memorex	0256	0276	0286	0356	0376	1156													
CD	MGA	0186																		
CD	Mission	0266																		
CD	Mitsubishi	0186	0496																	
CD	MTC	1306																		
CD	NAD	0086	0666	0736	0746															
CD	Nakamichi	0176	0486	0566																
CD	NEC	0306	0956	1016																
CD	Nikko	0596	1056																	
CD	Onkyo	0206	0506	0546	0856	1206														
CD	Optimus	0276	0296	0606	0646	0896	0906	0916	0946	0986										
CD	Panasonic	0106	0876	1146	1176															
CD	Penny	0956																		
CD	Philips	0216	0266																	
CD	Pioneer	0356	0986	1096																
CD	Proton	0266	1236																	
CD	Quasar	0106																		

CD	RCA	0256	0966	1166				
CD	Realistic	0256	0276	0286	0376	0606	0896	
CD	Revox	1226						
CD	Rotel	0006	0016	0026	0036	0046	0266	
CD	Saba Telecommander (e)	0556						
CD	SAE	0266						
CD	Samsung	1336						
CD	Sansui	0266	0676	1026	1076	1156		
CD	Sanyo	0196	0606	0686	0816			
CD	Scott	0376	1156					
CD	Sears	0396						
CD	Sharp	0286	0716	0946	1116	1126		
CD	Sherwood	0166	0286	0446	0526			
CD	Siemens Garrard	1296						
CD	Signature	0226						
CD	Sontec	1216						
CD	Sony	0116	0616	0916	1196			
CD	Staron	1286						
CD	STS	0076						
CD	Sylvania	0266						
CD	Symphonic	0386						
CD	Tandy	0356						
CD	Tangberg	1246						
CD	Teac	0286	0386	0436	0576	0846	0886	1406
CD	Technics	0106	0656	1146				
CD	Techwood	1376						
CD	Telefunken	0556						
CD	Thomson	0556						
CD	Toshiba	0086	0736					
CD	Vector Research	0116	1186					
CD	Victor	0366						
CD	Wards	0226						
CD	Yamaha	0056	0066	0136	0466	0596	0626	1116

LD

LD	Aiwa	0177		
LD	Denon	0167		
LD	Disco Vision	0037		
LD	Funai	0177		
LD	Hitachi	0037		
LD	Kenwood	0107	0127	
LD	Magnavox	0047		
LD	Marantz	0047		
LD	Mitsubishi	0157		
LD	NAD	0157		
LD	Panasonic	0097	0197	
LD	Philips	0047		
LD	Pioneer	0037	0057	0157
LD	RCA	0187		
LD	Realistic	0177		
LD	Rotel	0007	0017	
LD	Sharp	0147		
LD	Sony	0067	0077	0137
LD	Victor	0117		
LD	Yamaha	0027	0087	

	DVD					
DVD	A-Trend	0838				
DVD	Acoustic Solutions	0828				
DVD	Aeg	0788				
DVD	Aiwa	0828	0848			
DVD	Akai	0068	0458	0718	0788	
DVD	Alba	0798	0808	0868		
DVD	Amstrad	0868				
DVD	Ansonic	0638				
DVD	Apex Digital	0688				
DVD	Awa	0658				
DVD	Bang & Olufsen	0418				
DVD	Black Diamond	0868				
DVD	Blue Sky	0688	0738	0808	0868	
DVD	Boman	0678				
DVD	Brandt	0968				
DVD	Bush	0638	0708	0798	0808	0868 0918
DVD	Cambridge Audio	0778				
DVD	Centenna	0408				
DVD	Centrum	0868				
DVD	Cgv	0608	0698	0978	0988	0998
DVD	cineultra	0808				
DVD	Classic	0828				
DVD	Clatronic	0788				
DVD	Conia	0688				
DVD	Crown	0628	0968			
DVD	Cyber Home	0578	0838			
DVD	Cybercom	0638				
DVD	Cytron	0648	0968			
DVD	Daewoo	0628	0648			
DVD	Dansai	0628	0678			
DVD	Decca	0628				
DVD	Denon	0208	0448			
DVD	Denver	0788	0808			
DVD	Denzel	0668				
DVD	Diamond	0818	0968			
DVD	digired	0798				
DVD	Digitrex	0688				
DVD	Dik	0638				
DVD	Divido	0648				
DVD	Dmtech	0678				
DVD	Dual	0668	0678	0828	0868	0968
DVD	Elta	0708				
DVD	Emerson	0648				
DVD	Enzer	0668				
DVD	Ferguson	0968				
DVD	Finlux	0278	0628	0678	0858	
DVD	Ge	0798				
DVD	Global Sphere	0818				
DVD	Go video	0678				
DVD	Goldstar	0278	0858			
DVD	Goodmans	0678	0708	0718	0968	
DVD	Graetz	0668				
DVD	Grundig	0288	0648	0718	0738	0868 0968
DVD	Grunkel	0628				
DVD	Hanseatic	0278	0858			

DVD	Harman/Kardon	0318					
DVD	Hdt	0648					
DVD	Hitachi	0308	0338	0378	0508	0668	
DVD	Hiteker	0688					
DVD	Hyundai	0678					
DVD	Isp	0738					
DVD	Jamo	0878	0888				
DVD	Jmb	0738					
DVD	Jocel	0898					
DVD	Jvc	0098	0188	0288	0438	0538	0548 0768
DVD	Karcher	0678					
DVD	Kendo	0808					
DVD	Kenwood	0158	0448	0498			
DVD	Kiss	0668					
DVD	Lasonic	0528					
DVD	Lawson	0648					
DVD	Lecson	0908					
DVD	Lenco	0628	0638	0808	0968		
DVD	Lenoxx	0708					
DVD	Lexia	0808					
DVD	Lg	0278	0858				
DVD	Lifetec	0638	0968				
DVD	Limit	0818					
DVD	Linn	0358					
DVD	Loewe	0288	0368				
DVD	Logic Lab	0818					
DVD	Logix	0648	0678				
DVD	Lumatron	0648					
DVD	Luxman	0508					
DVD	Magnavox	0138	0438	0468	0728	0768	
DVD	Manhattan	0648					
DVD	Marantz	0218	0288				
DVD	Matsui	0738	0968				
DVD	Mbo	0708					
DVD	Medion	0638	0678	0968			
DVD	Metz	0568	0868	0948			
DVD	Micromedia	0288	0438	0768			
DVD	Micromega	0288					
DVD	Microsoft	0938					
DVD	Microstar	0638					
DVD	Minax	0868					
DVD	Mitsubishi	0148	0428	0868			
DVD	Monyka	0668					
DVD	Mustek	0828					
DVD	Mx Onda	0968					
DVD	Nad	0328	0858				
DVD	Naiko	0628					
DVD	Neufunk	0668					
DVD	Nordmende	0638					
DVD	Onkyo	0078	0138	0438	0468	0518	0768
DVD	Optimus	0228	0558	0568	0948		
DVD	Orion	0738					
DVD	Oritron	0968					
DVD	Pacific	0588	0618	0638	0718	0818	
DVD	Palladium	0738					
DVD	Palsonic	0688	0918				

DVD	Panasonic	0038	0448						
DVD	Philips	0108	0138	0218	0288	0368	0438	0468	0768
DVD	Phonotrend	0808							
DVD	Pioneer	0118	0128	0198	0228	0558	0568	0948	
DVD	Proline	0898	0968						
DVD	Proscan	0168	0938						
DVD	Prosonic	0808							
DVD	Provision	0808							
DVD	Radionette	0858							
DVD	Raite	0668							
DVD	Rca	0168	0938						
DVD	Rec	0448	0918						
DVD	Red Star	0628	0788						
DVD	Reoc	0818							
DVD	Revoy	0808							
DVD	Roadstar	0708	0808	0918					
DVD	Rotel	0008	0548						
DVD	Saba	0968							
DVD	Salora	0278	0858						
DVD	Samsung	0088	0338	0508					
DVD	Sansui	0738	0788						
DVD	Scan	0648							
DVD	Schaub Lorenz	0788							
DVD	Schneider	0648	0678	0718	0968				
DVD	Scientific Labs	0818							
DVD	Scott	0688	0968						
DVD	Seg	0668	0818	0868					
DVD	Shanghai	0688							
DVD	Sharp	0048	0928						
DVD	Sherwood	0238	0858						
DVD	Shinco	0258	0798						
DVD	Shinsonic	0488							
DVD	Silva	0788							
DVD	Silvaschneider	0638							
DVD	Singer	0708							
DVD	Skymaster	0828							
DVD	Slim art	0628							
DVD	Sm Electronics	0708	0818	0828					
DVD	Sony	0028	0268	0348	0388	0508	0958		
DVD	Sony-ps2	0298							
DVD	Soundmaster	0818							
DVD	Soundwave	0678							
DVD	Standard	0818	0968						
DVD	Sunwood	0788							
DVD	Sva	0688							
DVD	Tatung	0628							
DVD	Teac	0278	0568	0718	0798	0818	0858		
DVD	Technics	0038	0448						
DVD	Technika	0628							
DVD	Techwood	0868							
DVD	Tensai	0708	0968						
DVD	Tevion	0968							
DVD	Theta Digital	0228	0568						
DVD	Thomson	0178	0438	0538	0938				
DVD	Tokai	0668	0788						
DVD	Tokiwa	0648							

DVD	Toshiba	0058	0138	0438	0468	0748	0758	0768
DVD	United	0788						
DVD	Universum	0278	0858	0868				
DVD	Venturer	0718						
DVD	Vieta	0648						
DVD	Voxson	0638	0828					
DVD	Walkvision	0798						
DVD	Wesder	0808						
DVD	Wharfedale	0898	0908					
DVD	Xbox	0398						
DVD	Xms	0788	0918					
DVD	Yamaha	0018	0138	0148	0158	0168	0178	0288 0448 0478
DVD	Yamakawa	0668						
DVD	Yukai	0828						
DVD	Zenith	0138	0248	0278	0438	0468	0768	0858
DVD	3Dlab	0288						

AMP/TUNER

AMP	Audio Innovations	0085			
AMP	Bang & olufsen	0095			
AMP	Cambridge Audio	0075			
AMP	Rotel	0005	0015	0025	0035
AMP	Yamaha	0045	0055	0065	

BW6110-000 Cross reference for new added codes

1. Refer to codelist ver. 0.51
2. Source of new added codes:
 - 2.1. Original R/C

Item	Device	Brand Name	Remotec Code No.	Original R/C (Code No.)	Original R/C (Sales P/N)	Original R/C	Remark
1	TV	<i>Bang & Olufsen</i>	2821	-	040227-02	<i>Bang & Olufsen</i>	<i>mult-device</i>
2	VCR	<i>Bang & Olufsen</i>	0862	-	040227-02	<i>Bang & Olufsen</i>	<i>mult-device</i>
3	SAT	<i>Bang & Olufsen</i>	1973	-	040227-02	<i>Bang & Olufsen</i>	<i>mult-device</i>
4	AMP	<i>Bang & Olufsen</i>	0095	-	040227-02	<i>Bang & Olufsen</i>	<i>mult-device</i>
5	CD	<i>Bang & Olufsen</i>	1426	-	040227-02	<i>Bang & Olufsen</i>	<i>mult-device</i>
6	ATAPE	<i>Bang & Olufsen</i>	1436	-	040227-02	<i>Bang & Olufsen</i>	<i>mult-device</i>
7	DVD	<i>Bang & Olufsen</i>	0418	-	040227-02	<i>Bang & Olufsen</i>	<i>mult-device</i>

Note: (*1) Refer to BW0378R2 code list